





Writes the slew rate to the MPS.

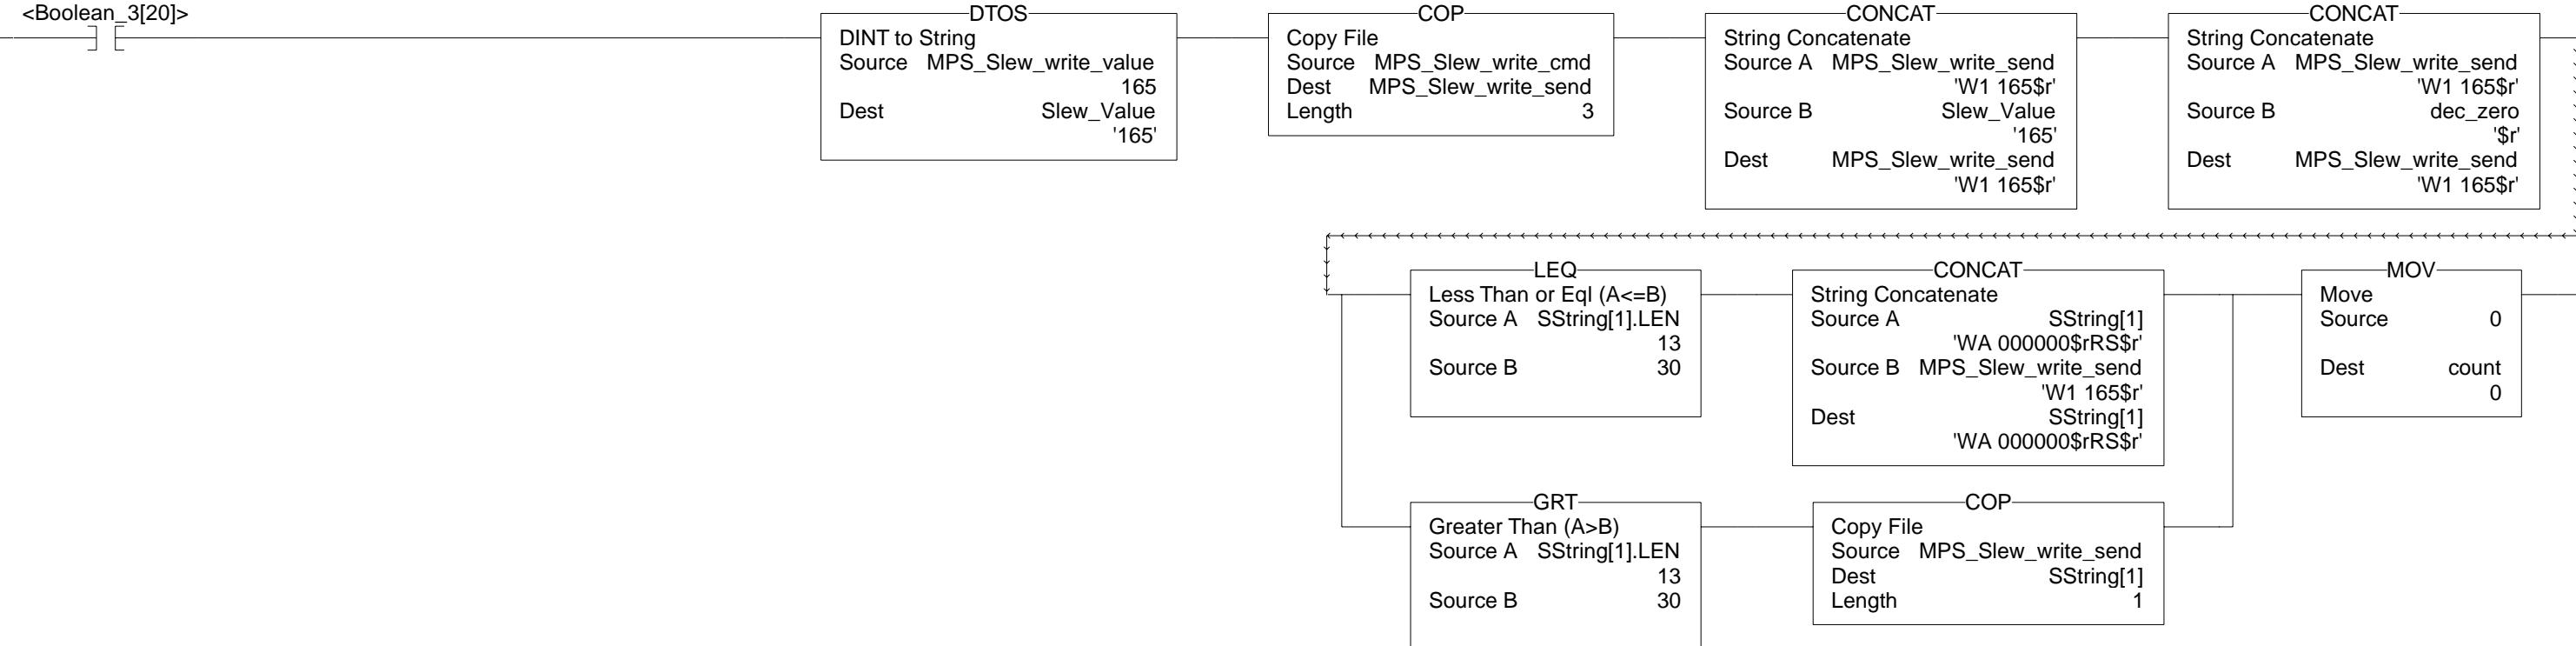


The N command is used to switch-on the power supply (main contact).

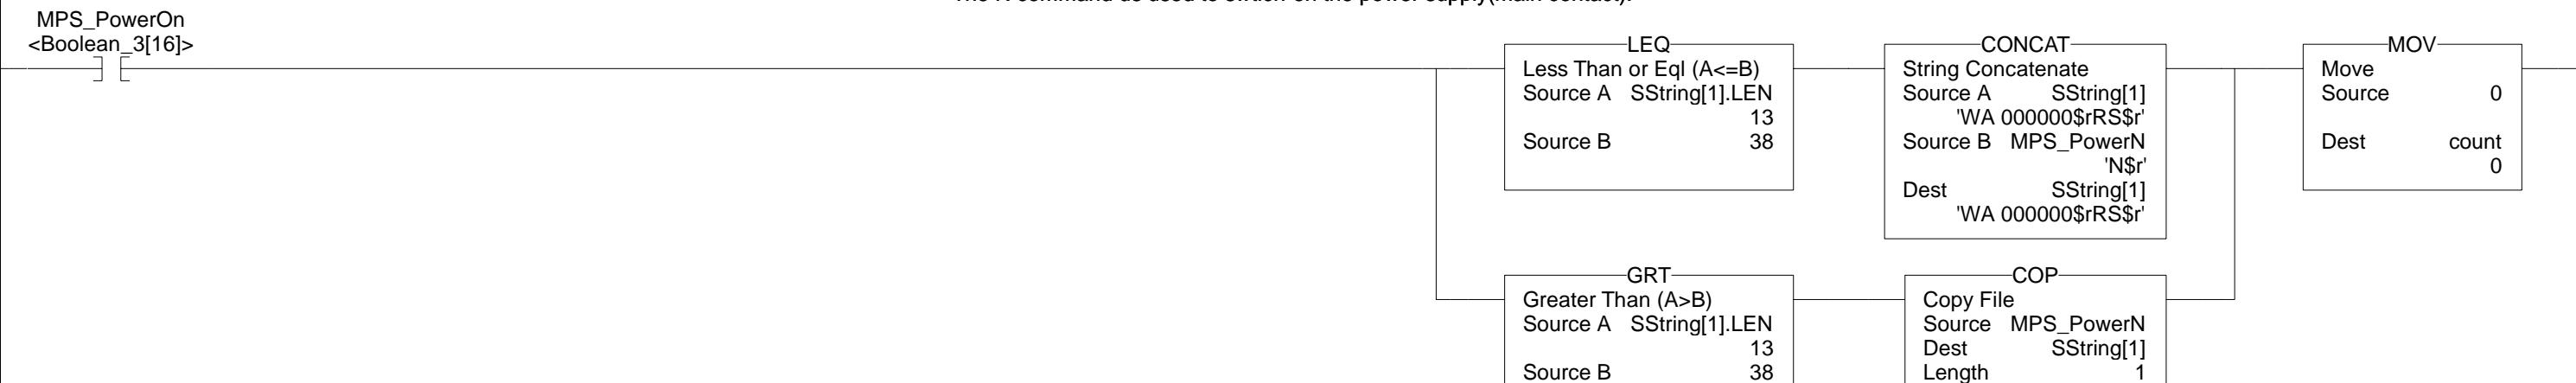

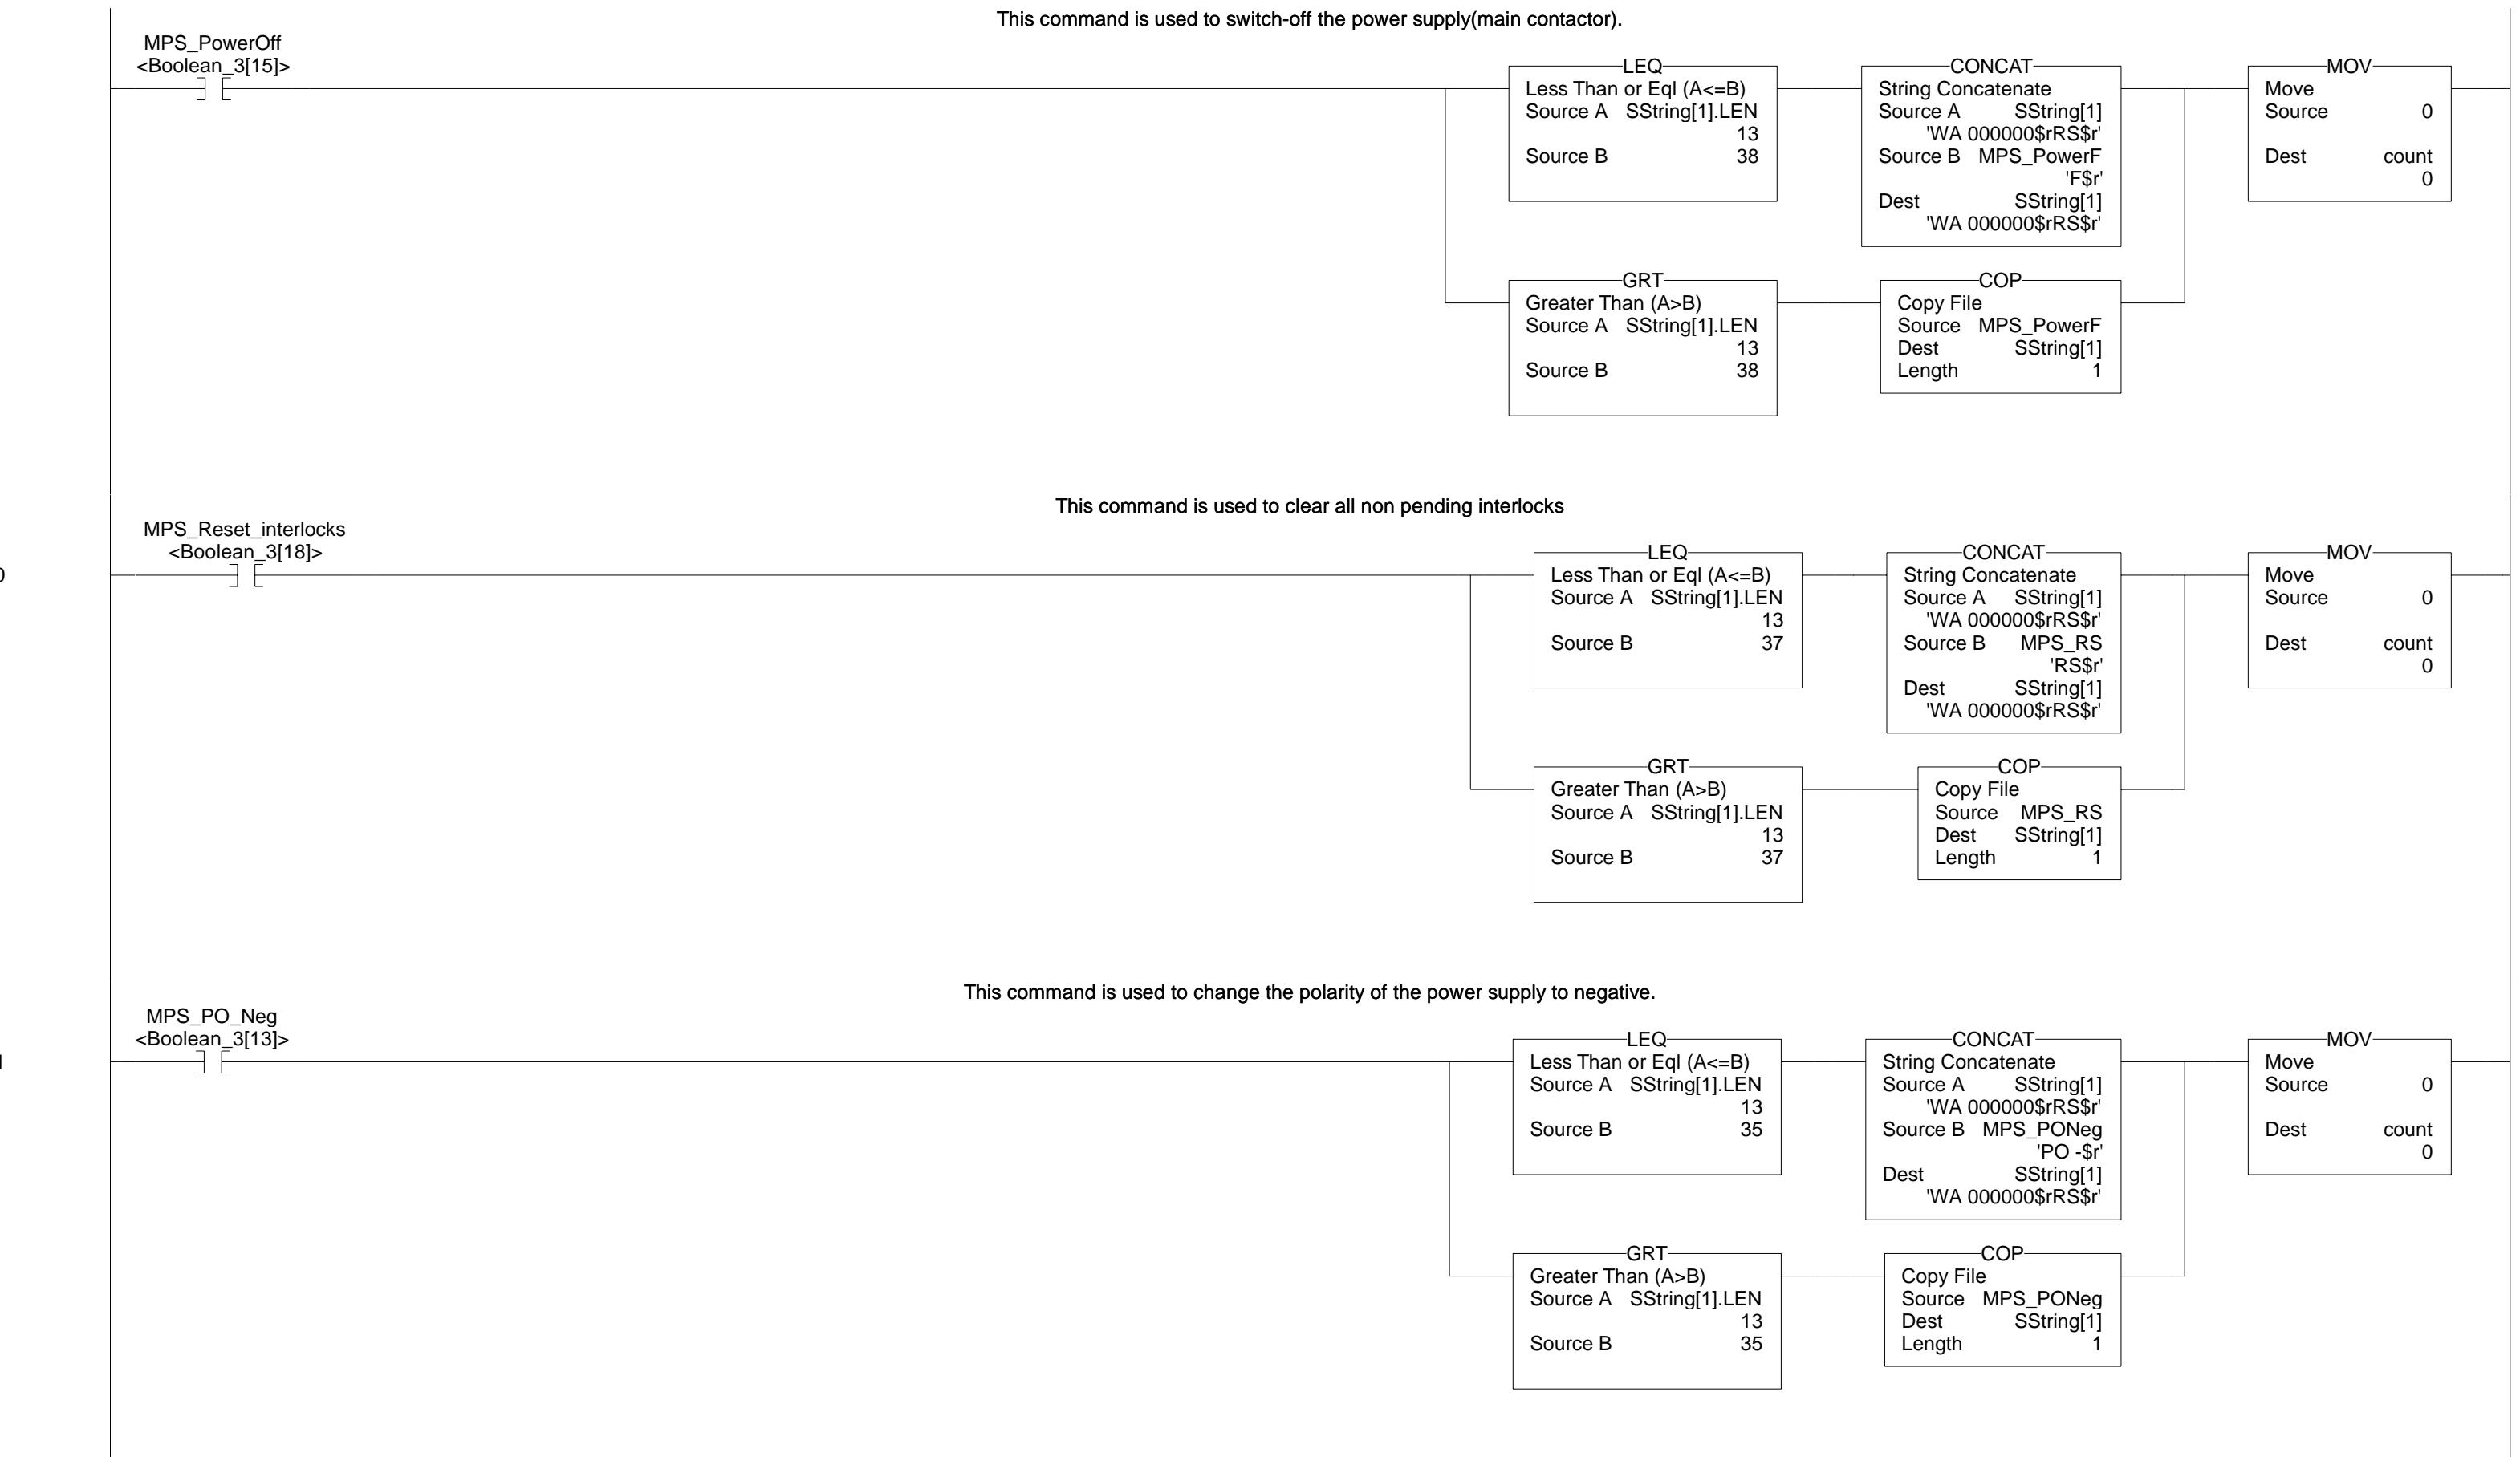

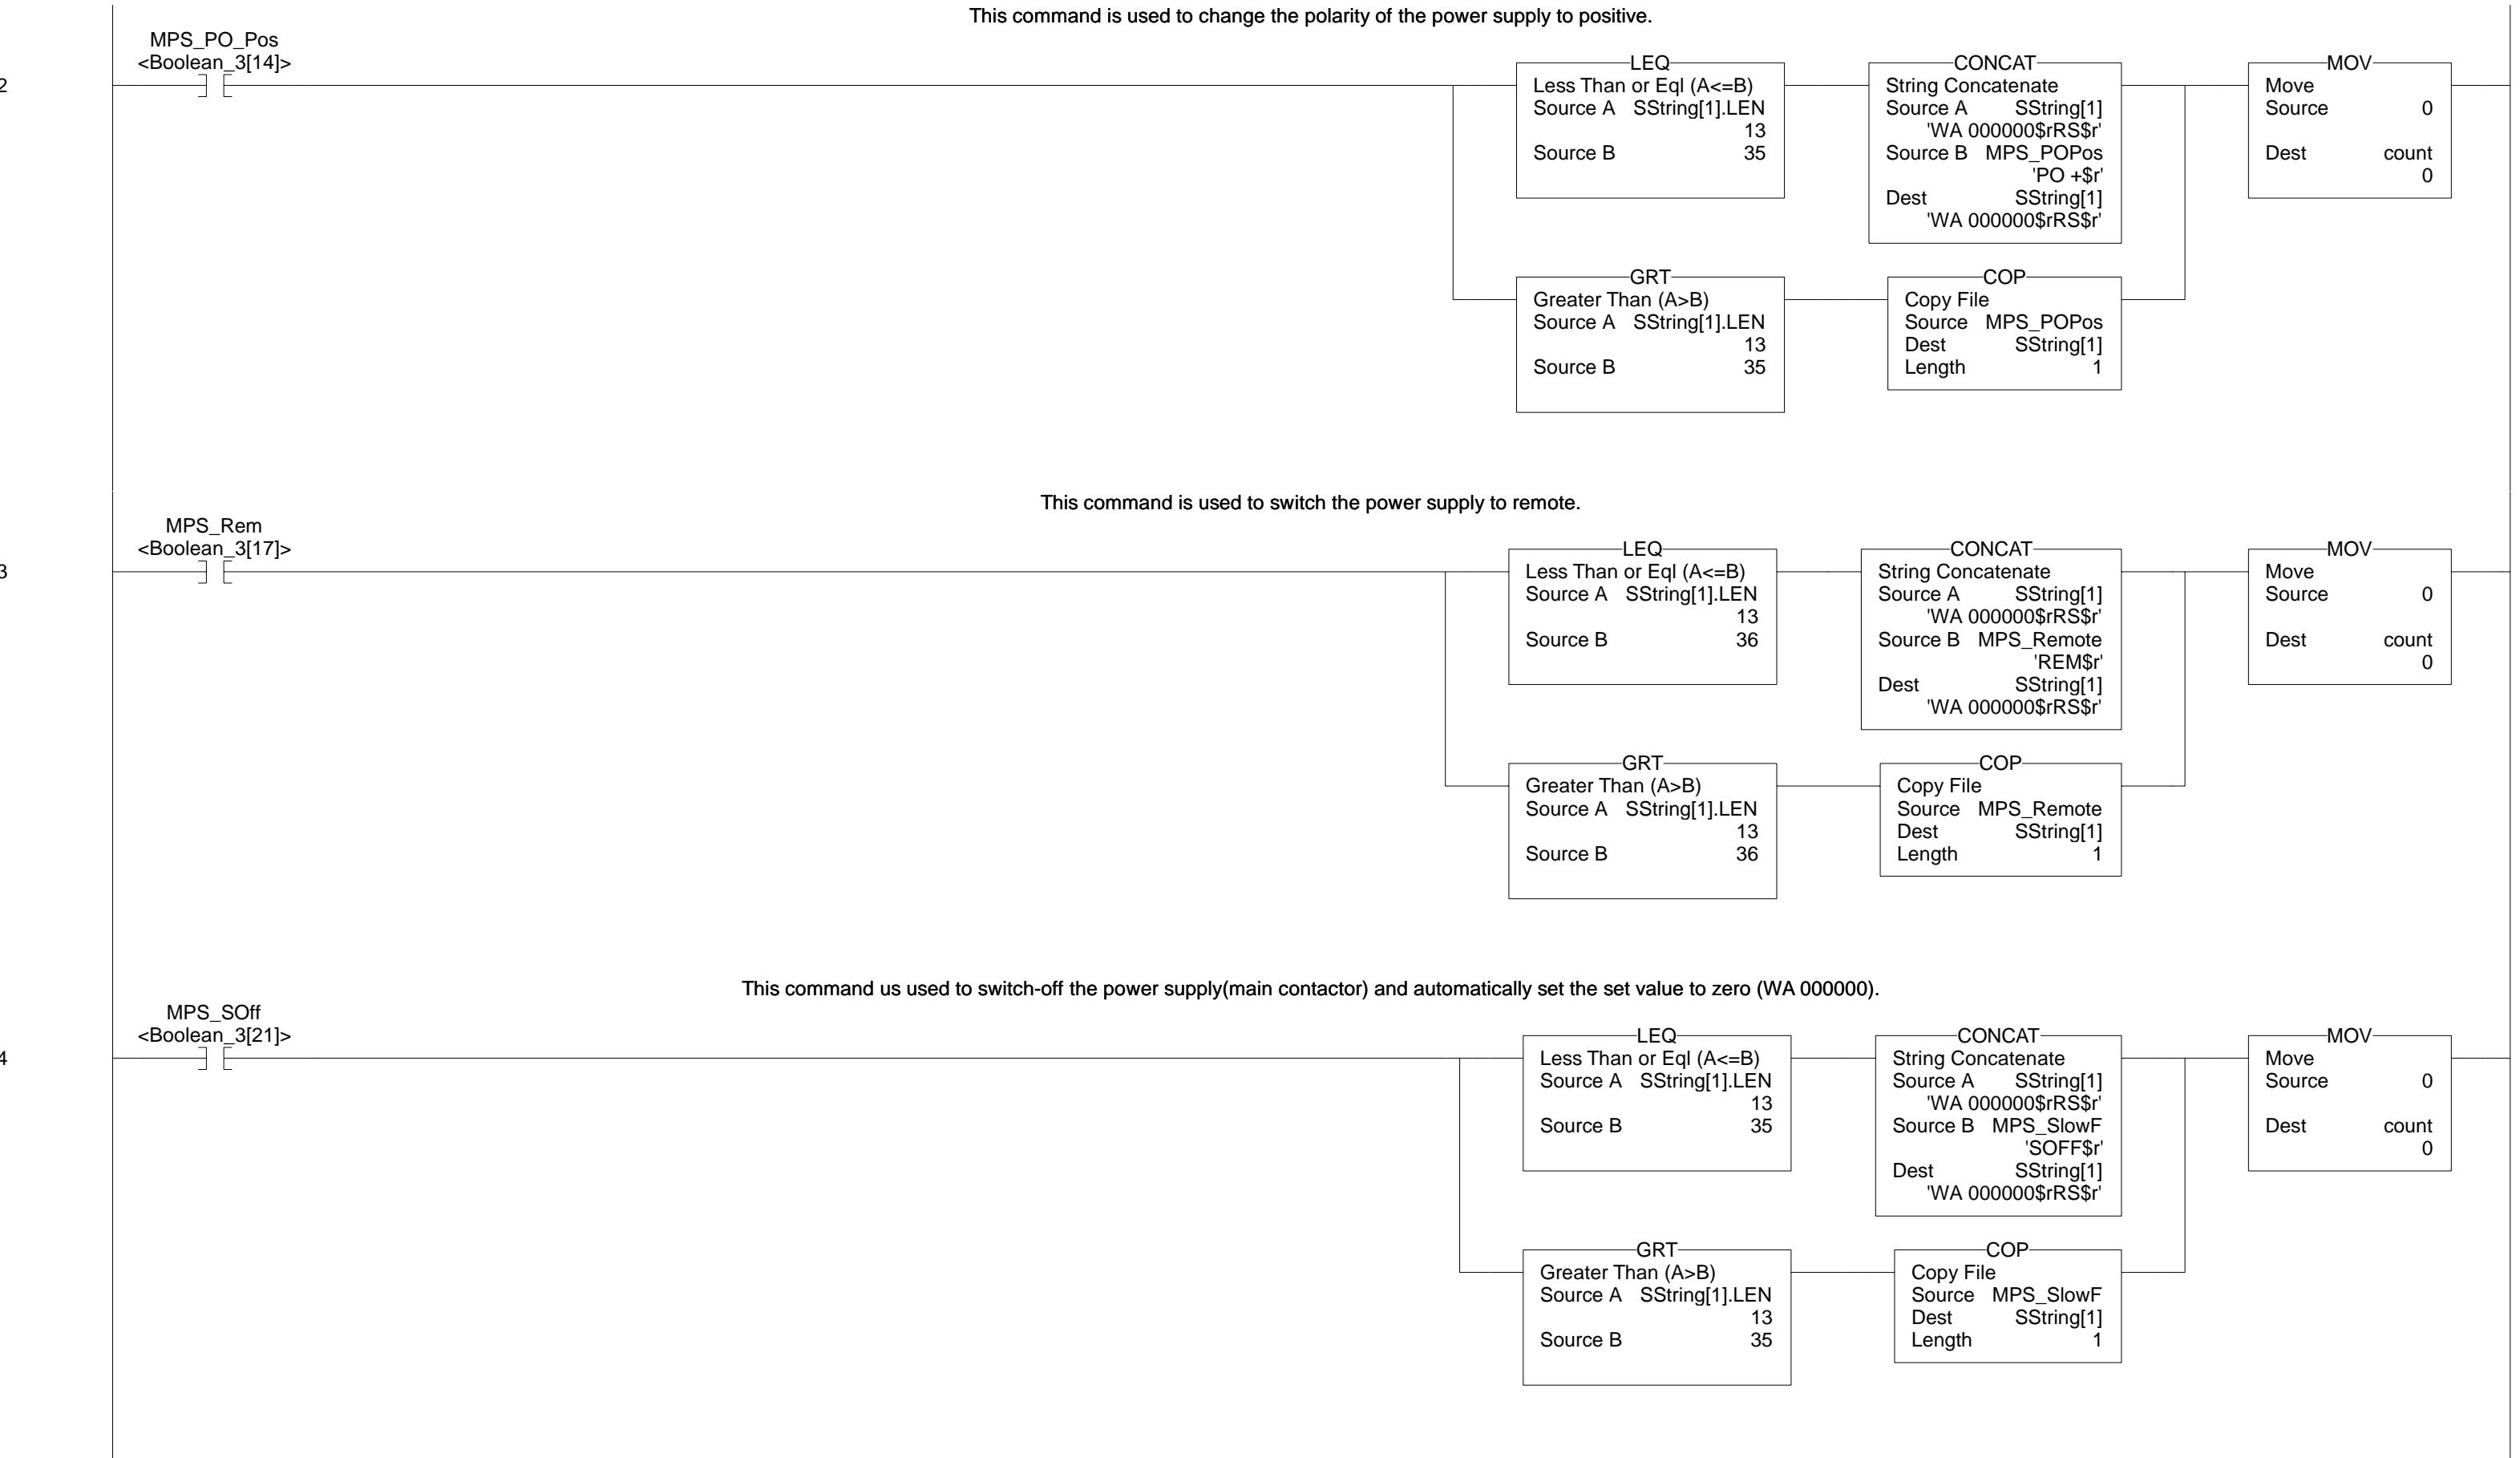

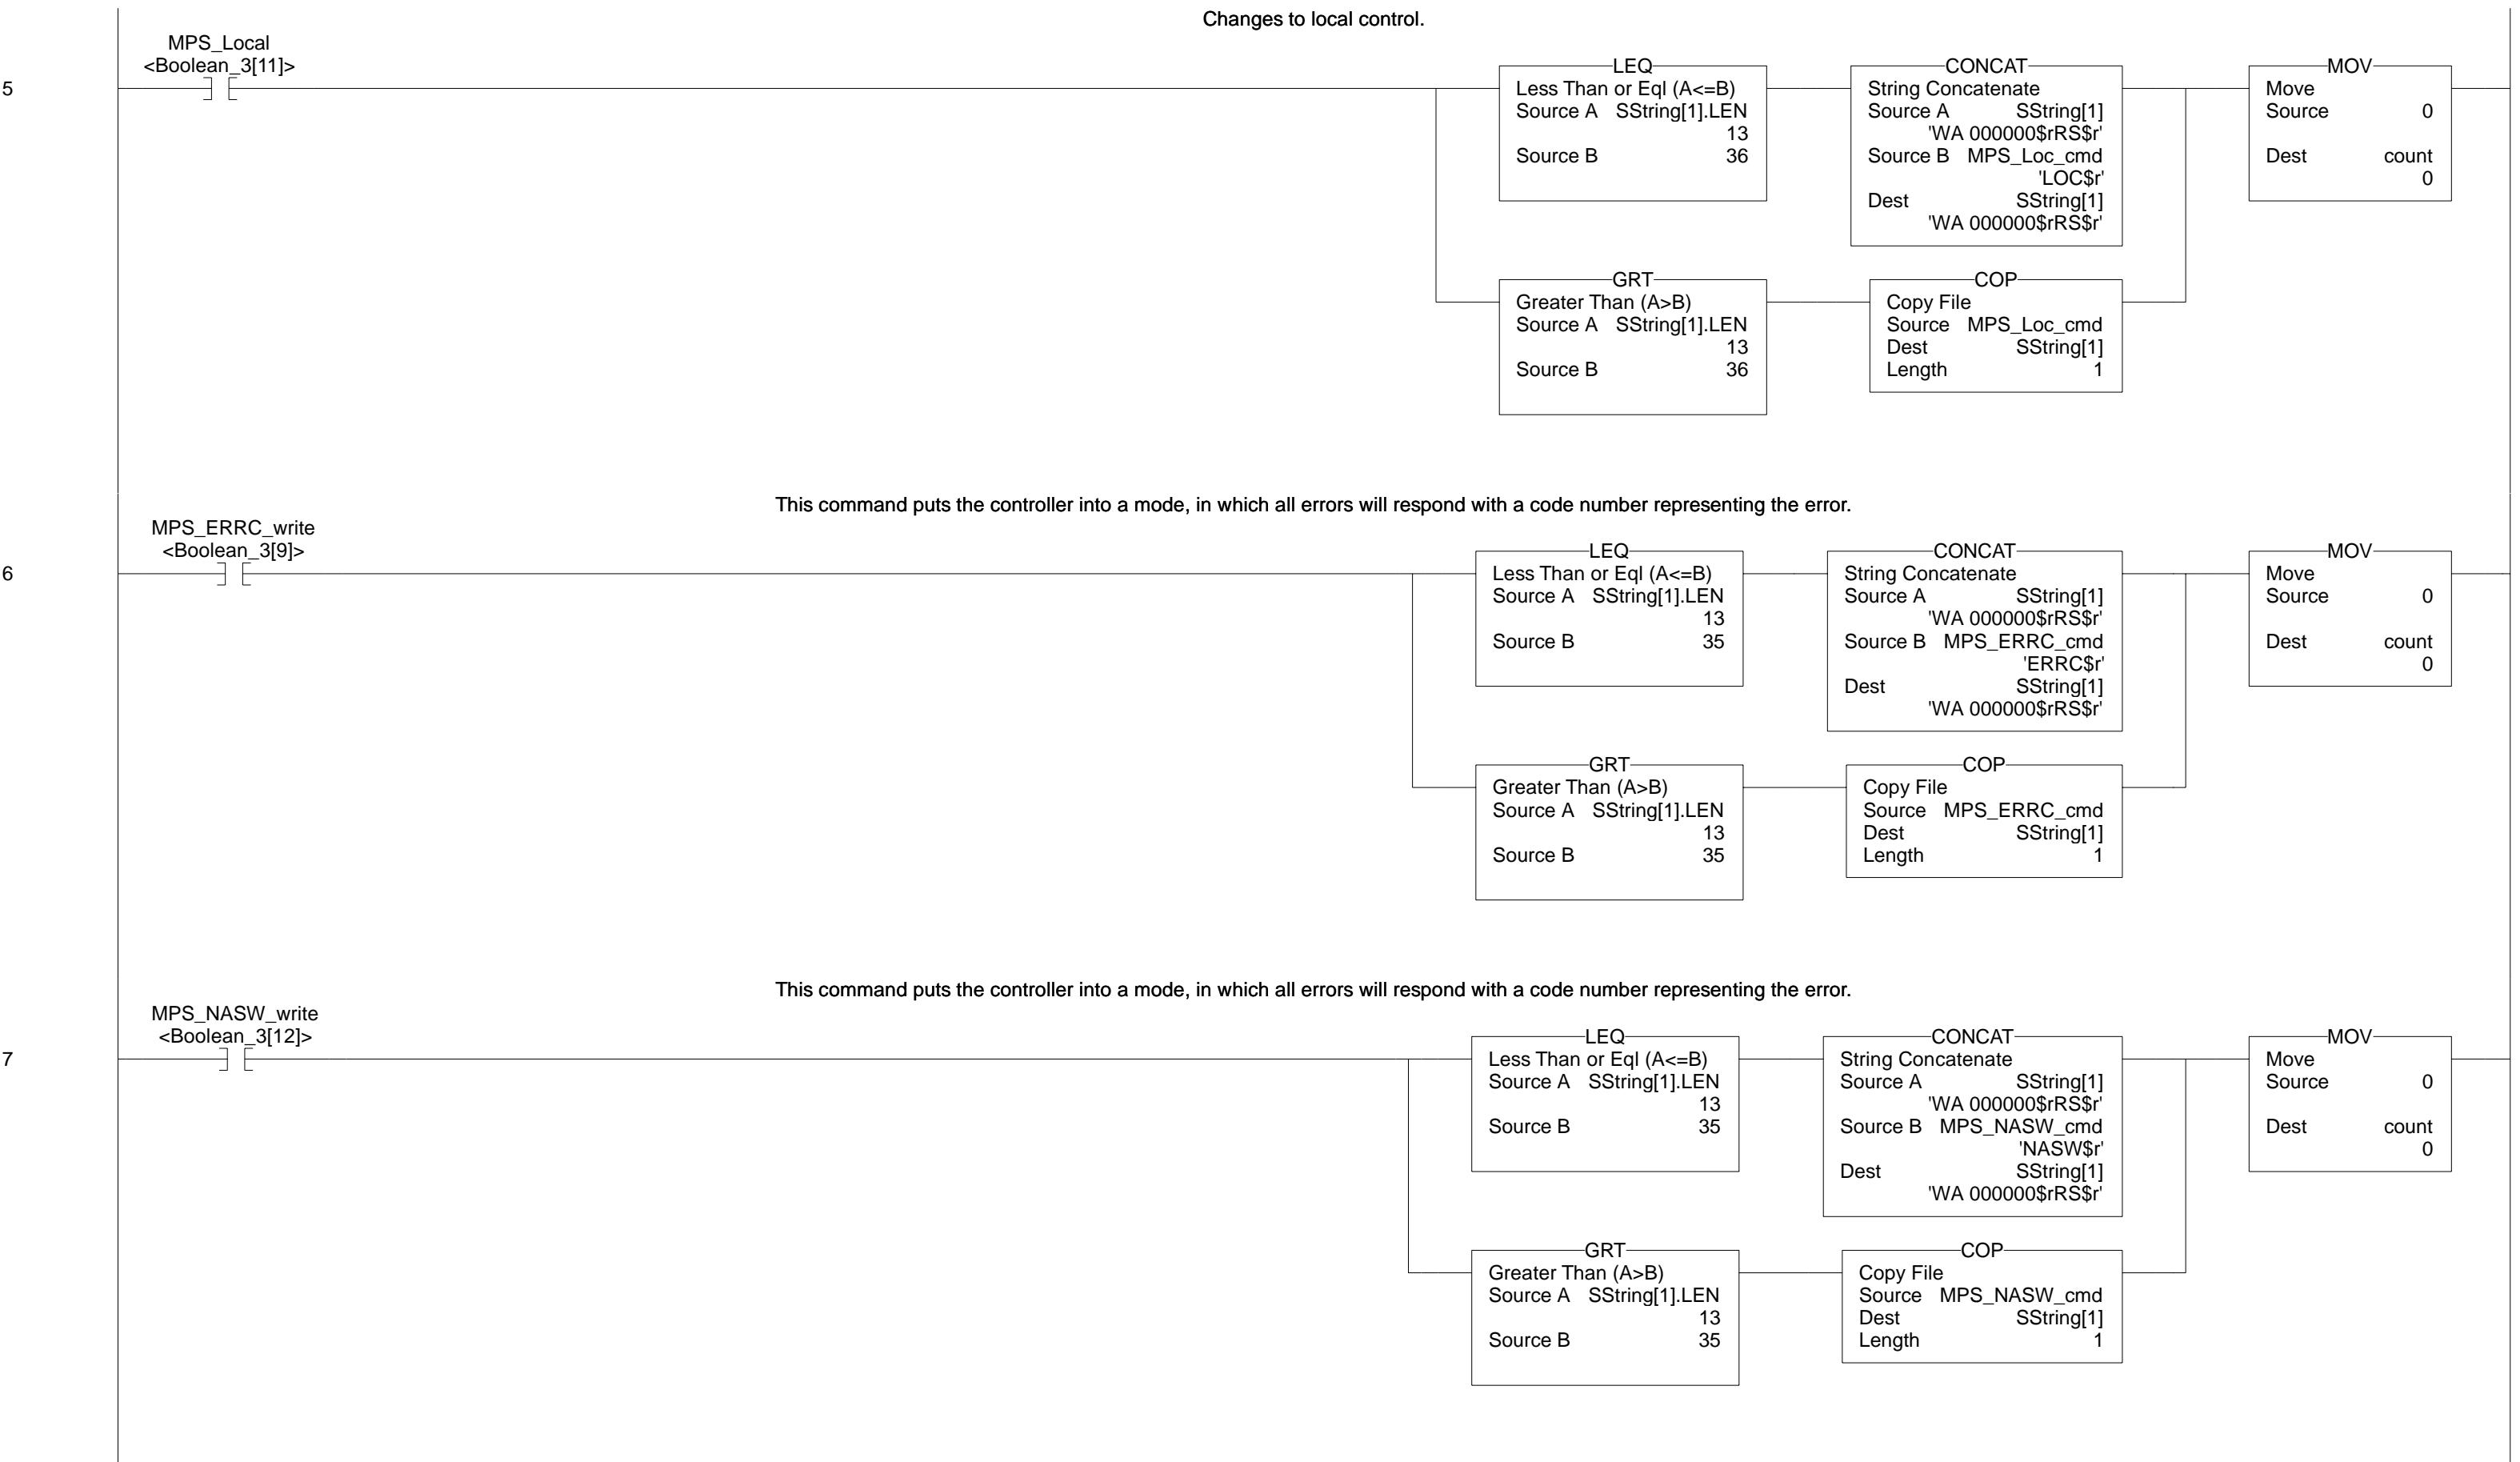

(End)