
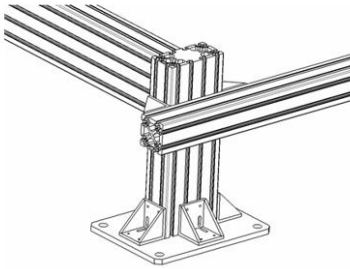




Anchoring in the clean room

 Tecnologie Avanzate		Installation & Control Scheme		Mod. 75/95/00
		P/N: TA-STR-001	DESCRIPTION: Rich Assembly Structure	SHEET: 5/25
REV.	DATE	REVIEW'S REASON	MODIFIED PHASES	SIGNATURE
0	04/08/2016	FIRST EMISSION	N.A.	I. Loi
WORKING CYCLE PHASE	DESCRIPTION AND NOTES		IMAGES	
OP.020	<p>Withdraw the following items:</p> <ul style="list-style-type: none"> N° 16 Screwed Bars 3/4 in x 8 in N° 32 3/4 in NUT STEEL GRADE A HEXAGON N° 32 WASHERS 3/4 in STEEL GRADE A <p>After assembling the preliminary structure, place it where the definitive structure will be installed.</p> <p>Having done this, through permanent marker, mark the floor in correspondence with TA-STR-002, TA-STR-003, STR-TA-004 and TA-STR-005, as shown on the side:</p> <p>Continue the procedure by moving away the preliminary structure in order to make \varnothing 1 in holes on the floor where marked before.</p> <p>The drilling depth: 3.19 in</p> <p>Anchor type: HILTI, Drop-in anchor HDI 3/4"</p>		<p><u>TYP 16 POSITIONS</u></p>  <p>MARK WITH INDELIBLE PEN</p>	
COMPILED BY:		VERIFIED BY:	APPROVED BY:	
I. Loi 		M. Pinna 	P. Coluzzi 