



1. All parts unassembled



2. Threaded rod screwed into base




3. Spring over threaded rod, on to base





4. Flange on to threaded rod, over spring

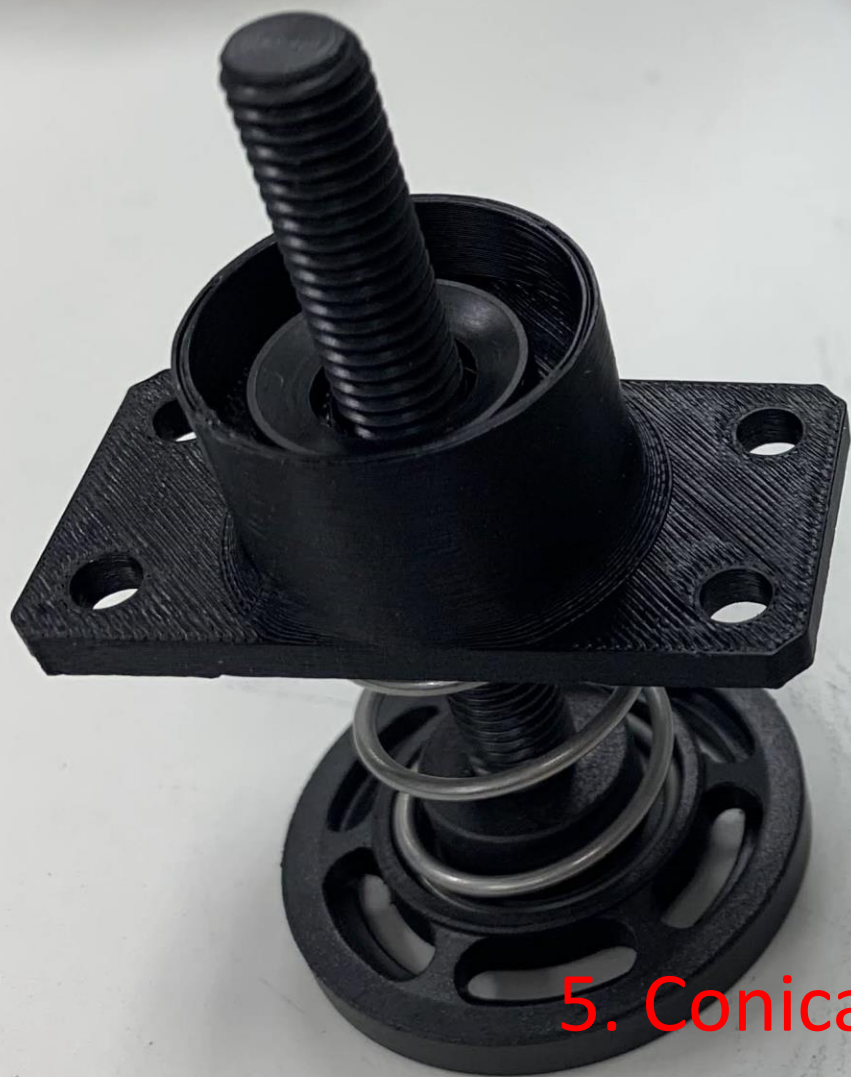

5. Conical washer on to threaded rod



6. Flat washer on to threaded rod





7. Nut #1 on to threaded rod



8. Nut #2 on to threaded rod





9. Nuts tightened down, putting tension on spring