


- (1) P.C. Board has plated ground  
 Connector on underside around  
 Screw hole.

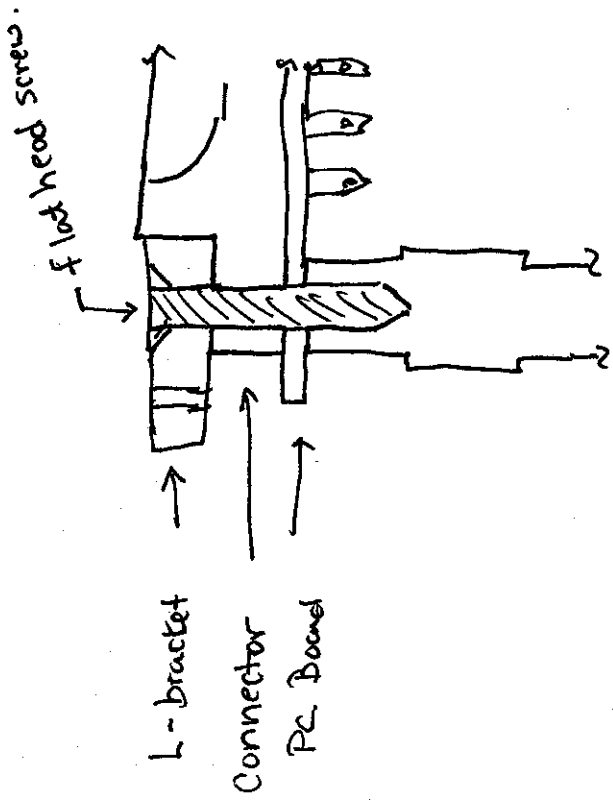

- (2) L-bracket locks into position against the connector.
- (3) Ground is direct from P.C. Board to stand-off to end plate.

Modifications by C.A. Meyer &  
 G. Wilkins.

CDC HVB Layout  
 Sketch #2  
 October 08, 2009